

Tire Carrier Install

1. Roll back carpet
2. Remove driver's side cargo panel
3. Position tire carrier ½ inch off of wheel hump
4. Mark out holes 3 per floor, 2 per upper rail cargo panel
5. Use 3/8 drill bit (caution while drilling aft. 2 holes as they will come near fuel lines)
6. Position back bracket to inside wheel opening; thread bolts and nuts to upper bracket
7. With helper install underside floor bracket; align holes; install 4 nuts and bolts and tighten all bolts/nuts
8. Reinstall cargo panel
9. Trim or position carpet as fit
10. Position tire on lugs
11. Use 7/16 twenty fine thread lug nuts (not supplied)
12. Tighten tire

Ensure tire carrier and tire are centered between rear seat and tailgate when tailgate is closed. Should be an inch clearance on each side





