

Towing a QT With All 4 Wheels Down

Contributed By: Jeff Watts, Jr

The following is from the '79 Owner's Manual:

With Automatic Transmission Without Low Range Reduction Unit

Turn ignition switch to Off position to unlock steering wheel.

Shift transmission to Neutral position.

Mark propeller shafts and yokes for proper alignment at assembly.

Disconnect front and rear propeller shafts at axle, and secure shafts to underside of vehicle or remove completely.

With Automatic Transmission With Low Range Reduction Unit-

Turn ignition switch to Off position to unlock steering wheel.

Shift transmission into Park.

Shift Low Range Reduction Unit into Neutral position.

Caution: Do not tow with the Emergency Drive control knob in the Emergency Drive position or the Low Range Reduction Unit in low range. If the control knob (in the glove box) was in the Emergency Drive position when the engine was shut down, restart the engine and turn the knob to the Normal position."